





To adjust the incline, put in camera mode (in aim), you can thus adjust the inclination in slightly loosening screw # 1 and completely screw # 2 to adjust the angle up or down. Then tighten the two screws again. You have to be two, the shooter and the trainer.

Articulated support
N°0 Medium position.
N°05 +0,5° UP -0,5° DOWN.
N°1 +1° UP -1° DOWN.
N°1,5 +1,5° UP -1,5° DOWN (usable in all the configurations).

3°
Amplitude of rotation max.

Medium axis support N°0